

Langaton kauko-ohjain RC-24

Tekniset tiedot

- Mitat: 60x42x28 (mm)
- Käyttöjännite: 24VDC
- Virrankulutus: ≤ 12mA
- Kauko-ohjaimia max: 30kpl
- Kauko-ohjaus etäisyys: 50m
- Lähetystaajuus: 433 Mhz
- Lähetysteho: 10mW
- Paino: 0.09kg


Kauko-ohjaimen liittäminen:

1. Paina pariliitos-painiketta
2. Paina avaus tai sulkupainiketta
3. Kun LED-valo vilkkuu pariliitos on muodostettu

Kauko-ohjaimen poistaminen käytöstä:

1. Pidä pariliitos-painike painettuna
2. Kun LED-valo sammuu kaikki kauko-ohjaimet ovat poistettu käytöstä

Kytcentä

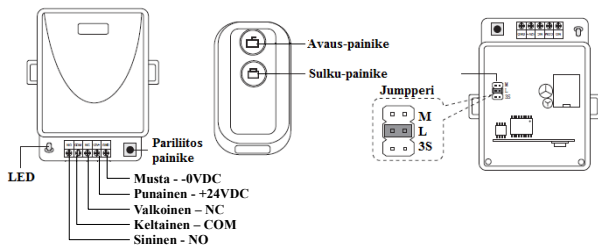

3 valinnaista tilaa:

1. Jumpperi "M" tilassa:

Ovi pysyy auki niin kauan kuin avaus-painiketta painetaan.
Ovi sulkeutuu vapauttamalla painikkeen. Sulku-painike ei ole käytössä.

2. Jumpperi "L" tilassa: (Tehdasasetus)

Avaus-painike avaa oven.
Sulku-painike sulkee oven.

3. Jumpperi "3S" tilassa:

Avaus-painiketta painettaessa ovi pysyy auki 3 sekunnin ajan.
Sulku-painike ei ole käytössä.

Wireless remote controller RC-24

Product information

- Size: 60L*42W*28H (mm)
- Operating voltage: 24VDC
- Operating current: $\leq 12\text{mA}$
- Max. remote controllers: 30pcs
- Remote control distance: 50m
- Transmitting frequency: 433 Mhz
- Transmitting power: 10mW
- Weight: 0.09kg


Pairing the remote controller:

1. Press pairing button
2. Press unlock or lock key
3. When LED flashes, pairing is complete

Removing the remote controller:

1. Press pairing button continuously
2. When LED turns OFF, all the remote controllers are removed

Wiring diagram

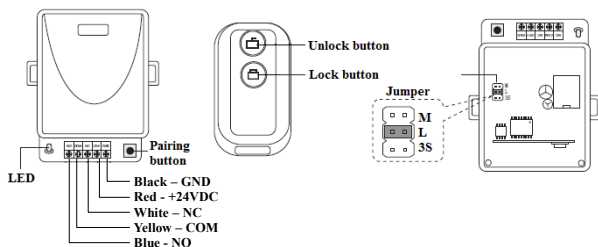

3 optional modes:

1. Jumper on "M" position:

By pressing the unlock button constantly on the remote control, door will stay open.
By releasing the unlock button, door will close. Lock button is invalid.

2. Jumper on "L" position: (Factory mode)

By pressing the unlock button, door stays open.
By pressing the lock button, door will close.

3. Jumper on "3S" position:

By pressing the unlock button, door will stay open for 3 seconds.
Lock button is invalid.